
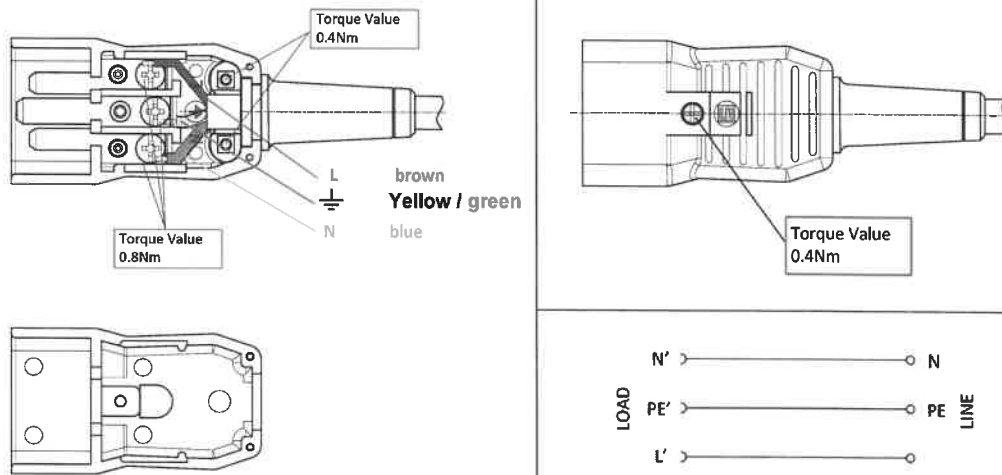


1. Wiring for 4796

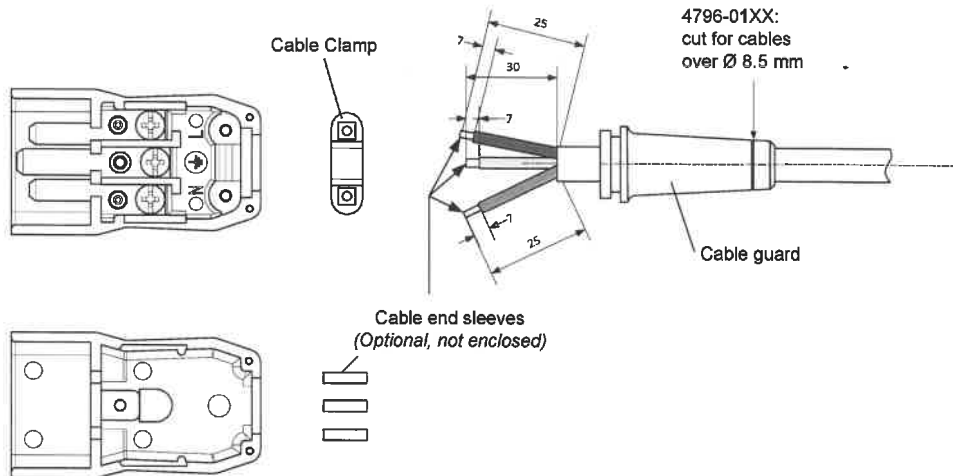

Applicable Cable Types

IEC				
Type	Cable Type ¹⁾	Wire Size		Cable Ø
		min. ²⁾	max.	max.
4796	H05VV -F 3G	3x 1.00 mm ²	3x 1.50 mm ²	10.4mm
	H05RR -F 3G	3x 1.00 mm ²	3x 1.50 mm ²	10.4mm

UL				
Type	Cable Type ³⁾	Wire Size		Cable Ø
		min.	max.	max.
4796	SV...	3x AWG16	3x AWG16	10.4mm
	SJ...	3x AWG16	3x AWG14	10.4mm

1) Harmonized wire coding in accordance with IEC60227-5 respectively IEC60245-4.

2) If cord has a length exceeding 2m, nominal cross-sectional areas shall be 1.0mm² or more.

3) Types according to UL 62 which begins with the given letters (i.e. SV... includes SV, SVT, SVE etc.).

Operation Manual					Wiring for 4796		
owner	creation date	release date	released by	change order no	rev	page	0115.0049
vettorsa	22.10.2019	22.10.2019	vettorsa	2018605	G	1 of 2	


2. Assembly Instruction

Disconnect power before wiring.

Keep removed piece parts at a safe place to have them ready for reassembling.

1. Loosen cover screw and remove cover.
2. Loosen cable clamp screws and remove cable guard.
3. Insert cord into PVC-cable guard.
4. Remove outer jacket on cord ca. 25 mm. Make sure not to hurt insulation of single conductors.
5. Strip bare each copper conductor 7 mm and crimp on multicore cable ends. Do not strip more than 7 mm.
6. Loosen terminal screws but do not remove screws.

For connecting wires to terminals insert bare ends of conductors from left side of terminal screw according to figure below. Make sure that no copper strands splice off when connecting conductors to clamps.

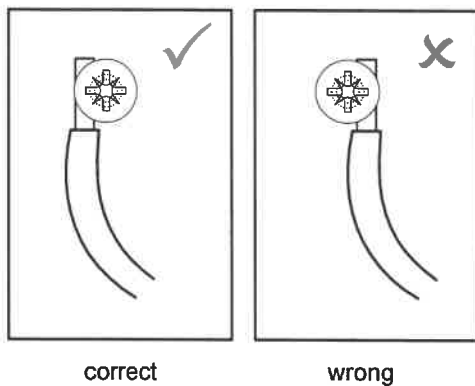

7. Connect green or green/yellow (ground) wire to center clamp marked with ground symbol.
8. Connect blue (white or light grey) wire to clamp marked „N“ (neutral).
9. Connect brown (black / "hot") wire to clamp marked „L“ (line).
10. Tighten all wire clamp screws with a torque of 0,8 Nm.
11. Insert shoulder of PVC-cable guard into cutout of base unit.
12. Assemble cable clamp over cut-off end of outer jacket of the cord and tighten cable clamp screws with a torque of 0,4 Nm.
13. Assemble cover unit and tighten cover screw with a torque of 0,4 Nm.

Warning: Failure to wire as instructed may cause personal injury or damage to device or equipment. To be installed or checked by an qualified person only. For factory assembly only.

Operation Manual					Wiring for 4796		
owner	creation date	release date	released by	change order no	rev	page	0115.0049
vettorsa	22.10.2019	22.10.2019	vettorsa	2018605	G	2 of 2	