


FACE VIEW

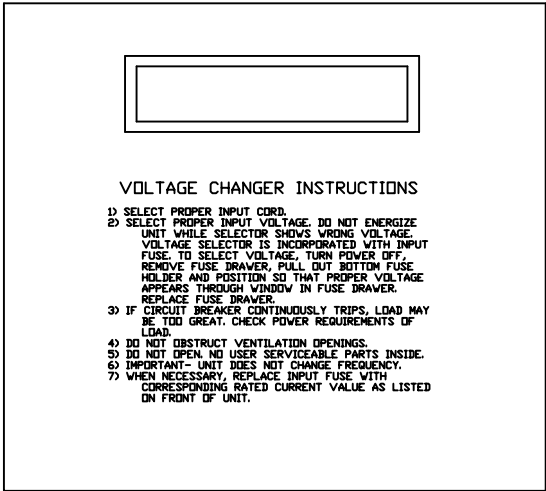


VOLTAGE CHANGER INSTRUCTIONS

- 1) SELECT PROPER INPUT CORD.
- 2) SELECT PROPER INPUT VOLTAGE. DO NOT ENERGIZE UNIT WHILE SELECTOR SHOWS WRONG VOLTAGE. VOLTAGE SELECTOR IS INCORPORATED WITH INPUT FUSE. TO SELECT VOLTAGE, TURN POWER OFF, REMOVE FUSE DRAWER, PULL OUT BOTTOM FUSE HOLDER AND POSITION SO THAT PROPER VOLTAGE APPEARS THROUGH WINDOW IN FUSE DRAWER. REPLACE FUSE DRAWER.
- 3) IF CIRCUIT BREAKER CONTINUOUSLY TRIPS, LOAD MAY BE TOO GREAT. CHECK POWER REQUIREMENTS OF LOAD.
- 4) DO NOT OBSTRUCT VENTILATION OPENINGS.
- 5) DO NOT OPEN. NO USER SERVICEABLE PARTS INSIDE.
- 6) IMPORTANT- UNIT DOES NOT CHANGE FREQUENCY.
- 7) WHEN NECESSARY, REPLACE INPUT FUSE WITH CORRESPONDING RATED CURRENT VALUE AS LISTED ON FRONT OF UNIT.



BACK VIEW

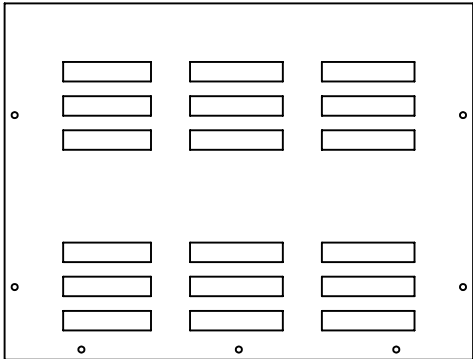

SIDE VIEW

THIS DOCUMENT AND ITS CONTENTS ARE THE PROPRIETARY CONFIDENTIAL PROPERTY OF INTERPOWER CORPORATION. NO USE OR COPIES MAY BE MADE WITHOUT WRITTEN PERMISSION FROM INTERPOWER CORPORATION.

DIMENSIONS IN MILLIMETERS

TITLE 2000VA Voltage Changer

DRAFT BY: JPC DATE: 5-5-2004

PART NUMBER: 85510280

DRAFTING APPROVAL: DATE:

MATERIAL:

DO NOT SCALE

INTERPOWER CORPORATION

REV	CHANGE DESCRIPTION	DATE	INITIALS

SHEET 1 OF 1