 
 


Guide to Measuring Power Cords & Cord Sets

 
Interpower® measures its **cord sets** from the face of the connector to the face of the plug, not including the pins. Interpower uses this method for all cord sets.

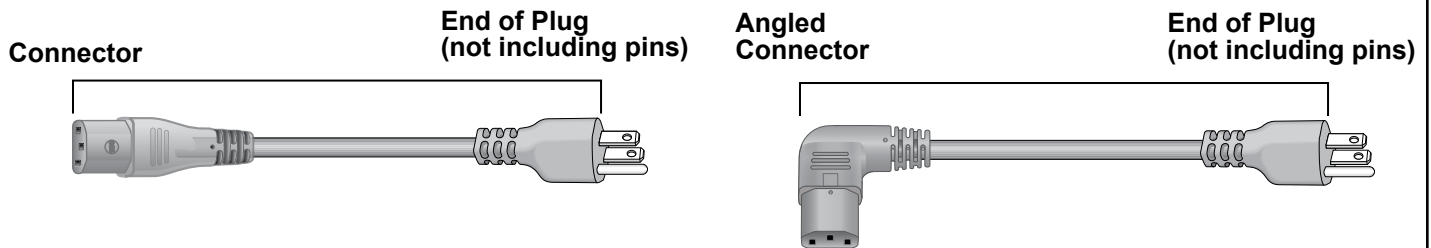

When using a hooded male plug, the measurement will be from the edge of the hood.

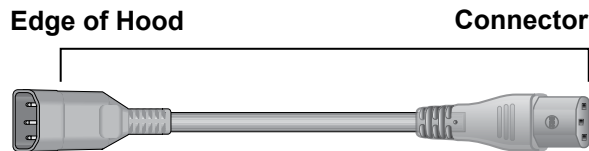

Interpower measures its **power cords** from the face of the connector or plug, not including pins, to the end of the cable. Interpower uses this method for all power cords.

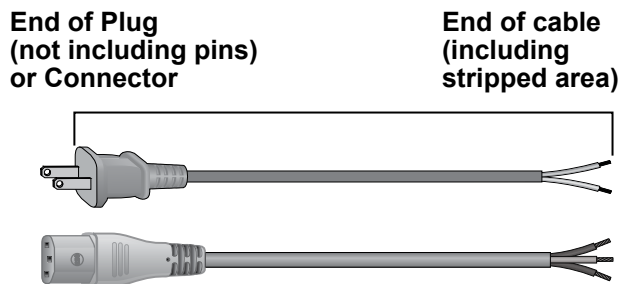

Interpower Standard Tolerances

Length	Standard Tolerance
0-2.99 ft. (0 - 913 mm)	+/- 1 in. (25mm)
3-5.99 ft. (914 - 1827mm)	+/- 2 in. (51mm)
6-11.99 ft. (1828 - 3656 mm)	+/- 3 in. (76mm)
12-19.99 ft. (3657 - 6095 mm)	+/- 4 in. (102mm)
20-49.9 ft. (6096-15210 mm)	+/- 6 in (152mm)
50+ (15240+ mm)	+/- 12 in (305mm)



U.S.A.
P.O. Box 115, Oskaloosa, IA 52577
United States/Canada, Puerto Rico, Virgin Islands
Toll-Free Phone: (800) 662-2290 • Toll-Free Fax: (800) 645-5360
International
Phone: (641) 673-5000 • Fax: (641) 673-5100
E-mail: sales@interpower.com

UK
10 Kelvin Drive • Knowlhill, Milton Keynes
Buckinghamshire MK5 8NH
UK, Ireland, Germany, Switzerland, Austria
Freephone: 00800 5566 5566 • Freefax: 00800 5655 5655
International
Phone: +44 (0)1908 295300 • Fax: +44 (0)1908 295301
E-mail: uk@interpower.com