


88010411

WARNING: WIRE CORRECTLY

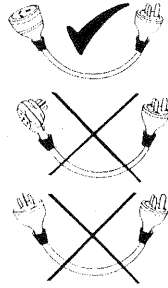

Extension Cord Socket


Suitable for 3 core 1mm²
and 3 core 1.5mm²
ordinary duty, flexible cords.

Suits cat 7PGY, 7PCL, 7PWE

HPM Industries Pty Ltd
www.hpm.com.au

010903/3.4 Made in China

WIRING INSTRUCTIONS

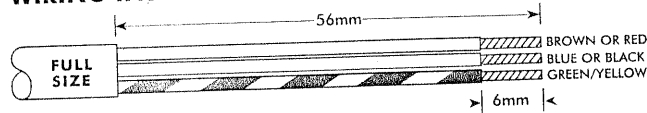

- 1) Slide cord lock and plastic cover onto cord.
- 2) Strip as shown. 'Lay' as shown.
- 3) Twist strands and push into connector as shown to ensure that nut clamps wire to the connector.
- 4) Position wires in slots provided as shown.
- 5) Push plastic cover down until lip is fully seated all around base (use screwdriver as lever).
- 6) Firmly tighten cord lock ring.



*Active – Brown (or Red) to A
*Neutral – Blue (or Black) to N
Earth – Green/Yellow (or Green) to E (Green)

