


L5-15 Receptacle

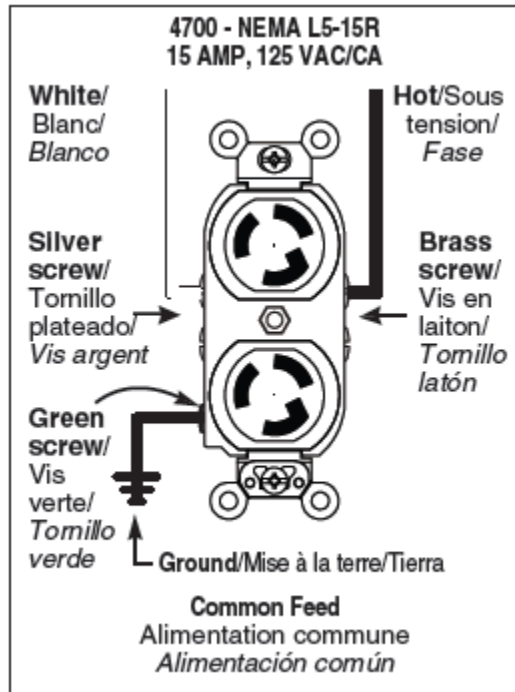

TO INSTALL: Back or side-wire accepts up to #10AWG copper or copper-clad wire.

1. TURN OFF POWER.
2. Remove insulation per "strip gage" on device [approx. 5/8" (1.6 cm)]. Connect per appropriate WIRING DIAGRAM.

NOTE: All receptacles are self-grounding.