


88010470

RETAIN THIS CARD FOR REF.

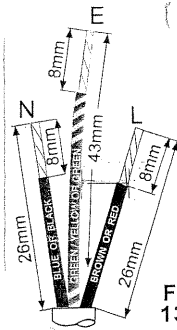

**CORD PREPARATION**

1. REMOVE 43mm of OUTER SHEATH.
2. CUT L & N CORES TO 26mm.
3. STRIP BACK INSULATION ON L, N & E CORES 8mm.
4. SEE REVERSE FOR WIRING GUIDE.



**FITTED WITH 13 AMP FUSE**

**WIRING GUIDE**

1. PRESS CORD BETWEEN GRIPS.
  2. REMOVE TERMINAL NUTS AND WRAP CONDUCTORS CLOCKWISE AROUND TERMINAL POSTS.
  3. REPLACE TERMINAL NUTS AND TIGHTEN.
  4. REPLACE COVER & TIGHTEN SCREW.
- N.B. ALWAYS USE CORRECT FUSE TO SUIT APPLIANCE.

