


Wiring Instruction for Part 88040350

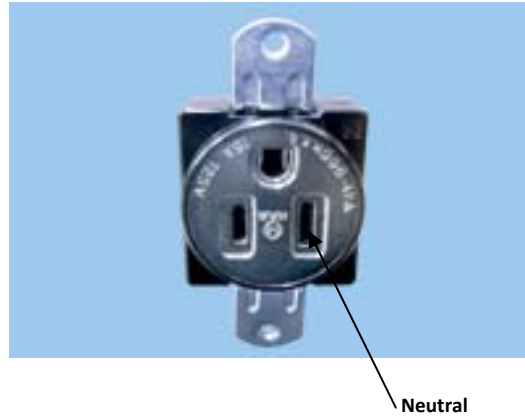

- 1) Prepare wires by stripping insulation back 15mm.
- 2) Insert wires into terminals and tighten. Recommended torque value of 0.565Nm(5.0inlb) for initial test wiring. Torque can vary depending on the wire, so it is the end users responsibility to test and settle on a final torque value.

Wiring Instruction 88040350

Rev. 08/15/16

Created by DDF

