


WIRE DETAIL
NOT TO SCALE

- * Use only cable with cross section 1.00 to 2.50mm² (Max. diameter 11mm) type H05VV-F.
- * Prepare wires according to the 'Wire Detail' view at the left. Cable entry hole may also need preparation to accept the larger diameter cables, by trimming and enlarging the hole.
- * Insert wires into appropriate terminal locations as demonstrated in the "Wiring View" drawing in the lower left corner. Then, remove strain relief and place cable in cradle. Replace strain relief and alternately tighten screws until adequately secure.
- * Replace cover and secure.

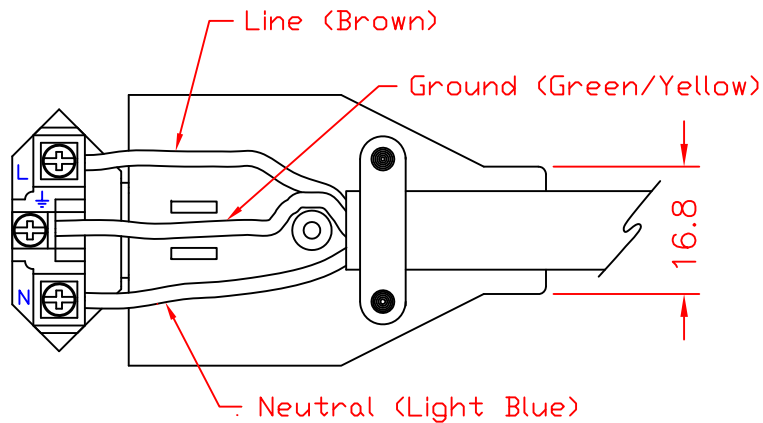

WIRING VIEW

THIS DOCUMENT AND ITS CONTENTS ARE THE PROPRIETARY CONFIDENTIAL PROPERTY OF INTERPOWER CORPORATION. NO USE OR COPIES MAY BE MADE WITHOUT WRITTEN PERMISSION FROM INTERPOWER CORPORATION.

DIMENSIONS IN MILLIMETERS

TITLE 20A Brazillian Plug
Wiring Instruction

DRAFT BY: DDF **DATE:** 3/20/2016

PART NUMBER: WI88040320

DRAFTING APPROVAL: **DATE:**

MATERIAL:

DD NOT SCALE

INTERPOWER CORPORATION

REV	CHANGE DESCRIPTION	DATE	INITIALS
A	Creation of wiring instruction.	3/20/16	DDF

SHEET 1 OF 1